



User Instructions for Allen Organ Hymn-Player (LDS version)

Cursor is moved by pressing the **CURSOR** button on the Console Controller™.
Selections are made by scrolling with the dial or arrows.

1. Move cursor to **MEM** in the Console Controller window.
2. Scroll to “**Hymn Player**”.
3. Press the **CURSOR** button.
4. Scroll to the desired hymn title. (Hymns are arranged in numerical order.)
5. **Tempo**: Increase or decrease tempo, if desired, by moving the cursor to **T** and scrolling up or down by increments of 10.
6. **Verses**: Change the number of verses, if desired, by moving the cursor to **V** and scrolling up or down.
7. **Introduction**: Move the cursor to **I** and **scroll to** select (+) for yes, or (-) for no introduction.
8. **Pitch**: Raise or lower the pitch, if desired, by moving the cursor to **P** and scrolling up or down by half-steps.
9. Press the **MEM** button to start the hymn.
10. Press the **MEM** button for each verse.
11. Press the Cancel piston on the organ console to stop the hymn at any time.
12. Press and hold the “**SET**” and “**CANCEL**” pistons **located under the bottom keyboard** to return to the main window.

Note: You can change the organ’s registration at anytime during playback, either manually or by using pistons. However, the registration will return to the hymn player default at the beginning of each **new** verse.